


Spreading Rate

Maximum: 20 yards per acre (about 10 loads)

Medium: 10 yards per acre (about 5 loads)




User Instructions

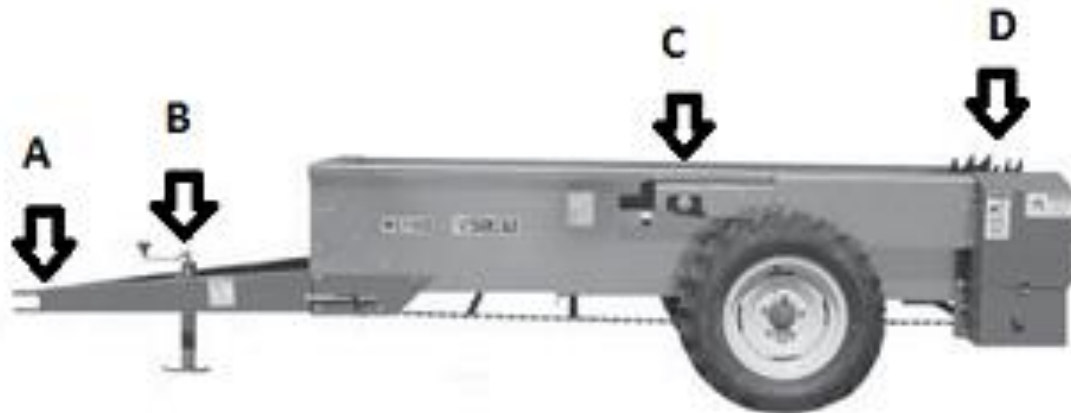

1. Attach to tractor/truck. Fasten the spreader hitch **(A)** to the drawbar using the hitch pin with a safety locking device.
2. Remove the weight from the jack **(B)**. Swing jack into its horizontal position, and lock in place using metal pin.
3. Load spreader with composted/dry manure (do not overload). If hauling heavier (wet) manure it may be necessary to reduce the load size. Overloading decreases spreading effectiveness. Never load material onto the beater **(D)**.
4. Drive to pasture.
5. Open back pan by pulling the rope on side.

6. Engage wheel drive by raising the Engage and Disengage lever **(C)** slightly, pull latch forward, lower lever. See engaged photo to the right **(1)**.
7. Drive slowly, avoiding sharp turns, and **NO BACKING UP** to spread material.
8. When empty, disengage wheel drive by raising and locking lever **(C)** and close pan by locking pin in back. See disengaged photo to the right **(2)**.
9. Drive back to manure bin or pile and repeat step 3 through 8.
10. Wash spreader and tires when finished.

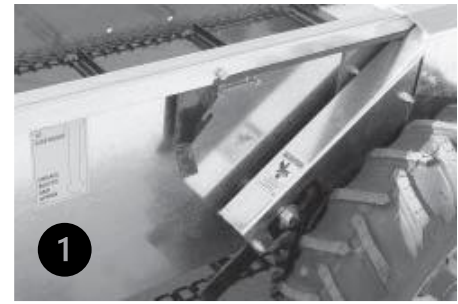

Warnings

- **Do NOT reverse** while the spreader arm is engaged – you will break the spreader
- **Do NOT overload** the spreader, avoid filling with wet material. Wet manure or a heavy load will cause the spreader to jam up. If this happens unload the spreader by hand until the unit engages.
- **Do NOT turn sharply** (no sharper than 40°) – the spreader hitch area will bend or torque.
- **Do NOT drive too fast!**

Please contact Jeff Frazier for more information: 360-899-8561 or jeff@skagitcd.org.